

5. Push the side cover forward to disengage the upper tabs, then remove the side cover.
6. Install the side cover by reversing the preceding removal steps.

FUEL TANK COVER

Removal/Installation


Refer to **Figure 5**.

1. Park the ATV on level ground and set the parking brake.
2. Remove the seat as described in this chapter.

WARNING

Fuel vapor is present when the fuel tank cap is removed. Because gasoline is extremely flammable and explosive, perform this procedure away from all open flames (including pilot lights) and sparks. Do not smoke or allow someone who is smoking in the work area as an explosion and fire may occur. Always work in a well-ventilated area. Wipe up any spills immediately.

3. Remove the fuel tank cap and breather tube.


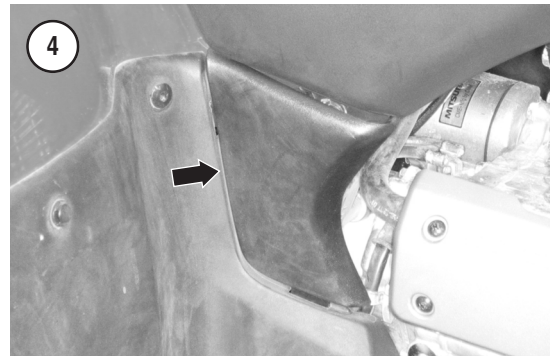


4. Remove the retaining clips securing the fuel tank cover.
5. Move the cover rearward to disengage the retaining tabs (**Figure 7**), then remove the cover.
6. Install the fuel tank cover by reversing the preceding removal steps.

FRONT CARRIER

Removal/Installation

1. Park the ATV on level ground and set the parking brake.

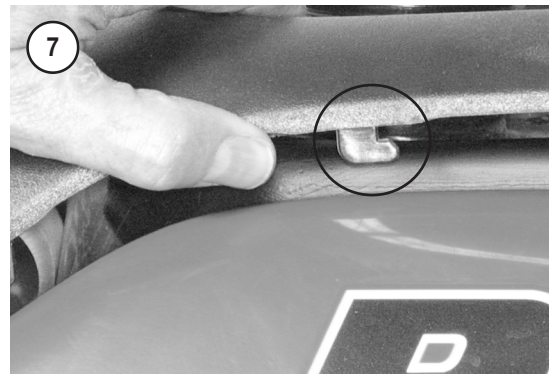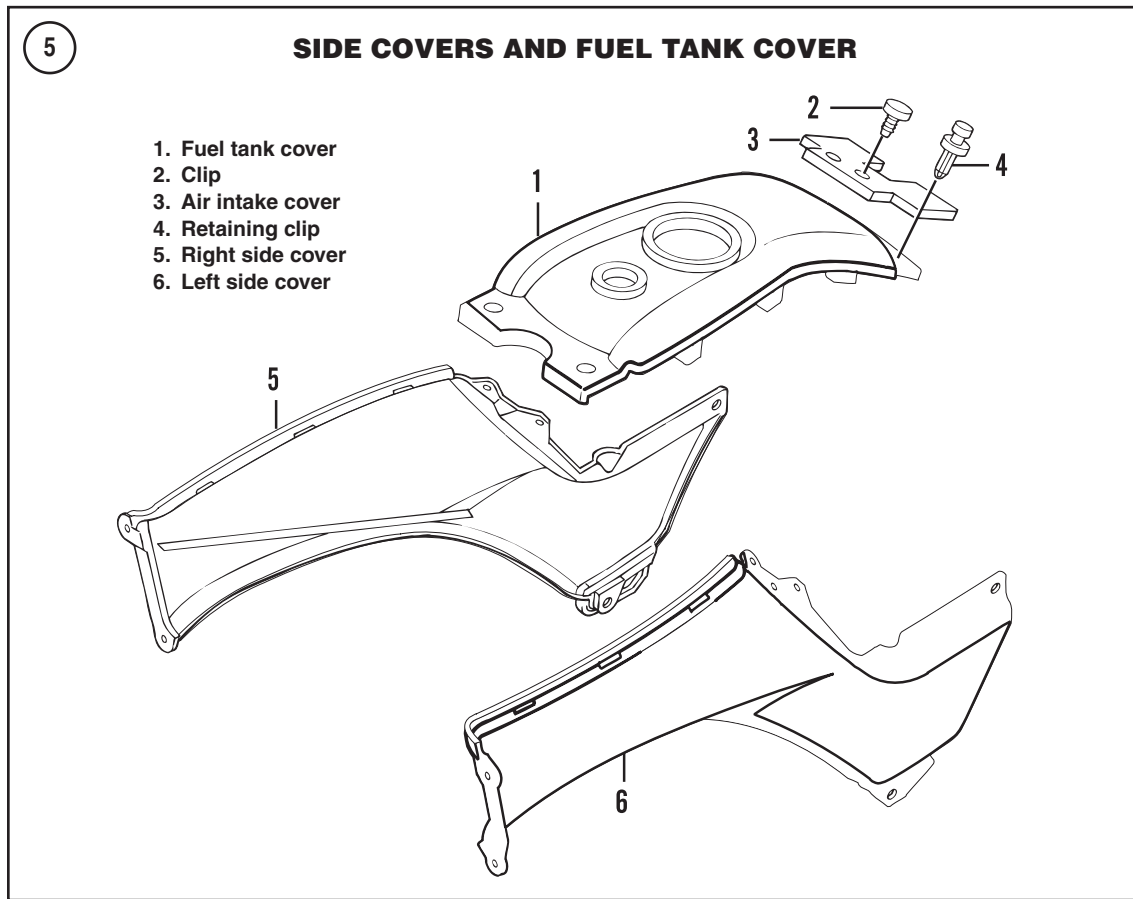

2. On early FE/TE models, remove the straps securing the sub-ICM module to the front carrier strut (Figure 8).
3. Remove the bolts securing the front carrier to the frame and front bumper.
4. Remove the front carrier (A, Figure 9).
5. Install the front cover by reversing the preceding removal steps.

FRONT BUMPER

Removal/Installation

1. Park the ATV on level ground and set the parking brake.
2. Remove the front carrier as described in this chapter.

3. Remove the headlight lower mounting bolts (**Figure 10**).
4. Remove the bolts securing the front bumper to the frame.
5. Remove the front bumper (B, **Figure 9**).
6. Install by reversing the preceding removal steps.

CENTER MUD GUARDS (FE AND TE MODELS)

Removal/Installation

1. Remove the recoil starter cover as described in this chapter.
2. Remove the footpeg (A, **Figure 11**).
3. On the right side, remove the socket bolt (B, **Figure 11**).
4. Remove the retaining clips.
5. Remove the center mud guard (C, **Figure 11**).
6. Reverse the removal steps to install the center mud guard.

FRONT MUD GUARDS



Removal/Installation

1. On FE/TE models, remove the center mud guard as described in this chapter.
2. Remove the retaining clips at the front of the mud guard (**Figure 12**).
3. Remove the socket bolt (A, **Figure 13**).
4. Remove the remaining retaining clips, then remove the front mud guard (B, **Figure 13**).
5. Reverse the removal steps to install the front mud guard.

REAR MUD GUARDS (FM AND TM MODELS)

Removal/Installation

1. Remove the recoil starter cover as described in this chapter.
2. On the right side, remove the socket bolts at the inner corner and at the center of the mud guard.
3. On the left side, remove the socket bolt.
4. Remove the retaining clips, then remove the rear mud guard.
5. Reverse the removal steps to install the rear mud guard.

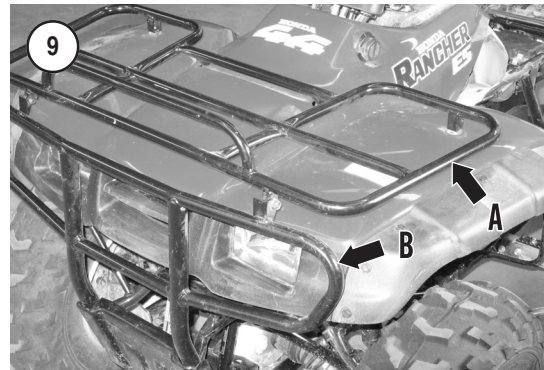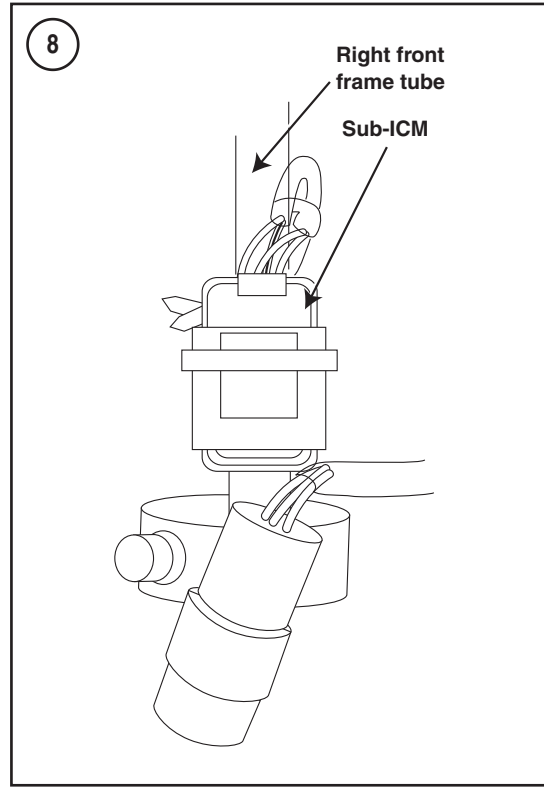

Copyright of Honda TRX350 RANCHER, 2000-2006 is the property of Penton Media, Inc. ("Clymer") and its content may not be copied or emailed to multiple sites or posted to a listserv without the copyright holder's express written permission. However, users may print, download, or email articles for individual use.